


Axon Body 3 Buttons and Button Actions

The Axon Body 3 camera has six buttons. The following image shows the button locations on the Axon Body 3 camera.

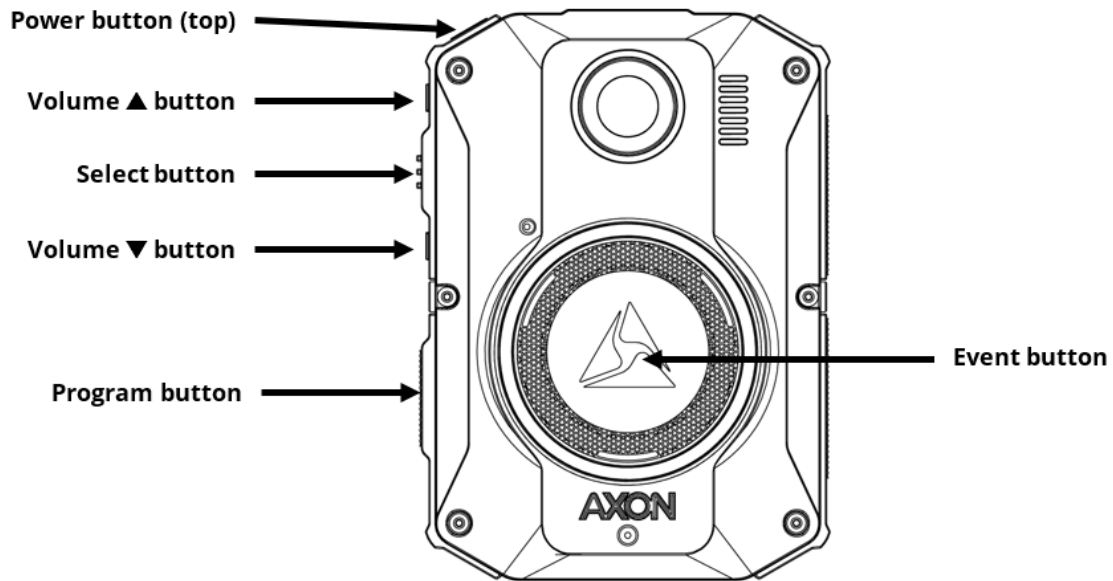

The button actions associated with user action are described below.

| Action | Button Actions |
|-----------------|---|
| Power On | Press Power button until short vibration. Camera starts and enters Ready (Buffering) mode. |
| Power Off | Press and hold Power button for 3 seconds. |
| Start Recording | Double-press Event button |
| End Recording | Press and hold Event button for 3 seconds |
| Add Marker | While recording, press Select button |

Increase speaker volume Press **Volume** ▲ button

Decrease speaker volume Press **Volume** ▼ button

Turn on or off lights Press and hold **Volume** ▲ button for 3 seconds

Enter Stealth mode Press and hold **Volume** ▼ button for 3 seconds

Exit Stealth mode Press and hold **Volume** ▲ or **Volume** ▼ button for 3 seconds*

Enter or exit Mute mode While recording, press and hold **Select** button for 3 seconds

Enter Sleep mode Press **Power** button and then press **Select** button

Exit Sleep mode Press **Power** button or double-press **Event** button

Activate display backlight Double-press **Select** button. Display backlight turn on for 5 seconds.

Pairing Simultaneously press the **Event** and **Program** buttons and then release.

* The camera remembers the previous volume and light settings when exiting Stealth mode.